



# AMS 1553 INTERCONNECT DIAGRAM

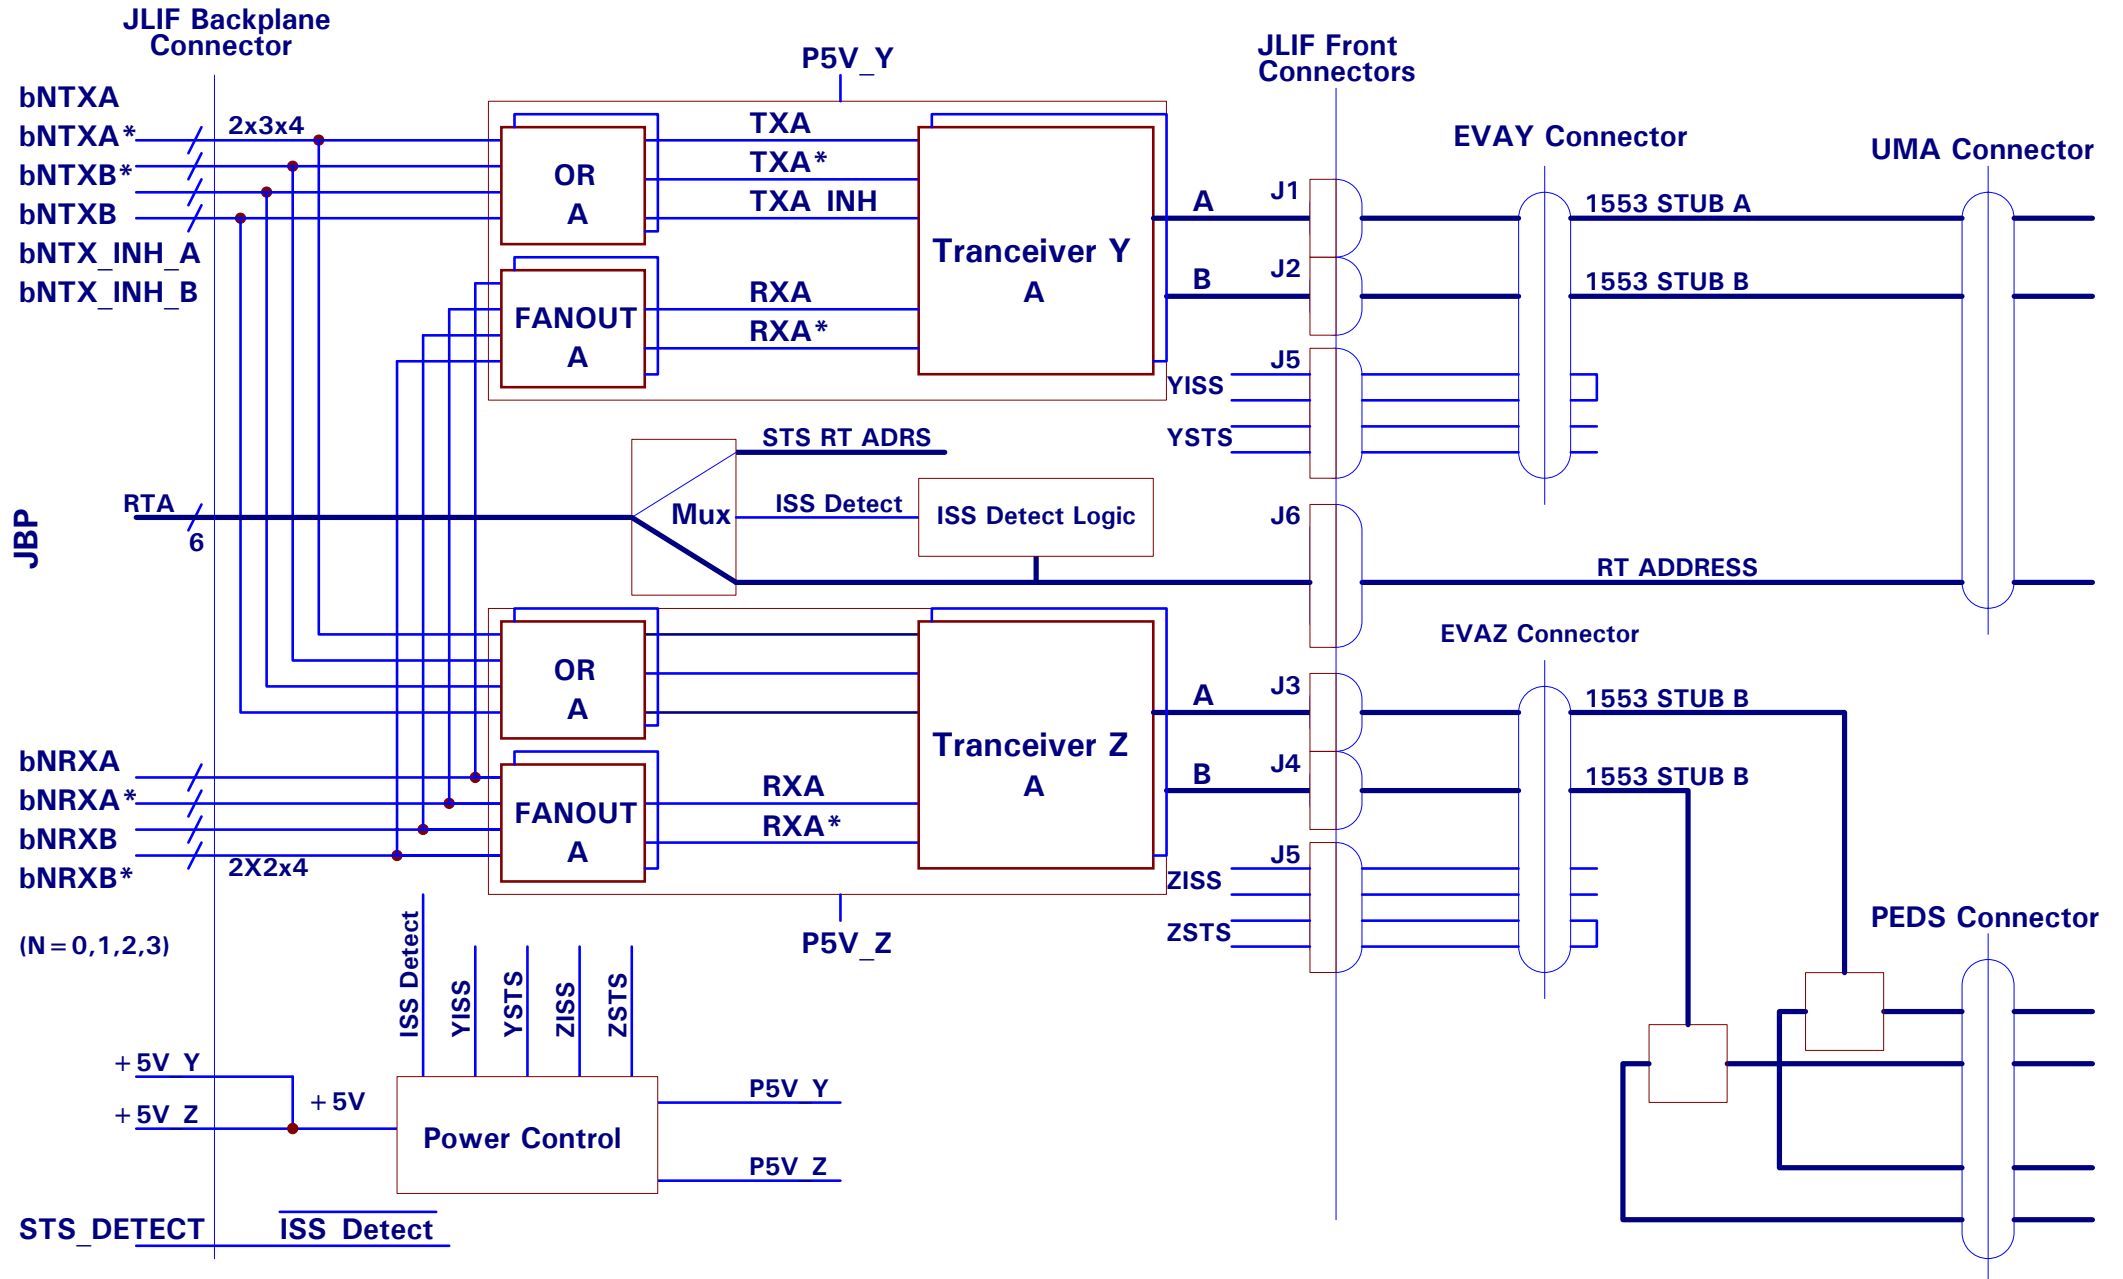

# JLIF: ISS Detect Signal

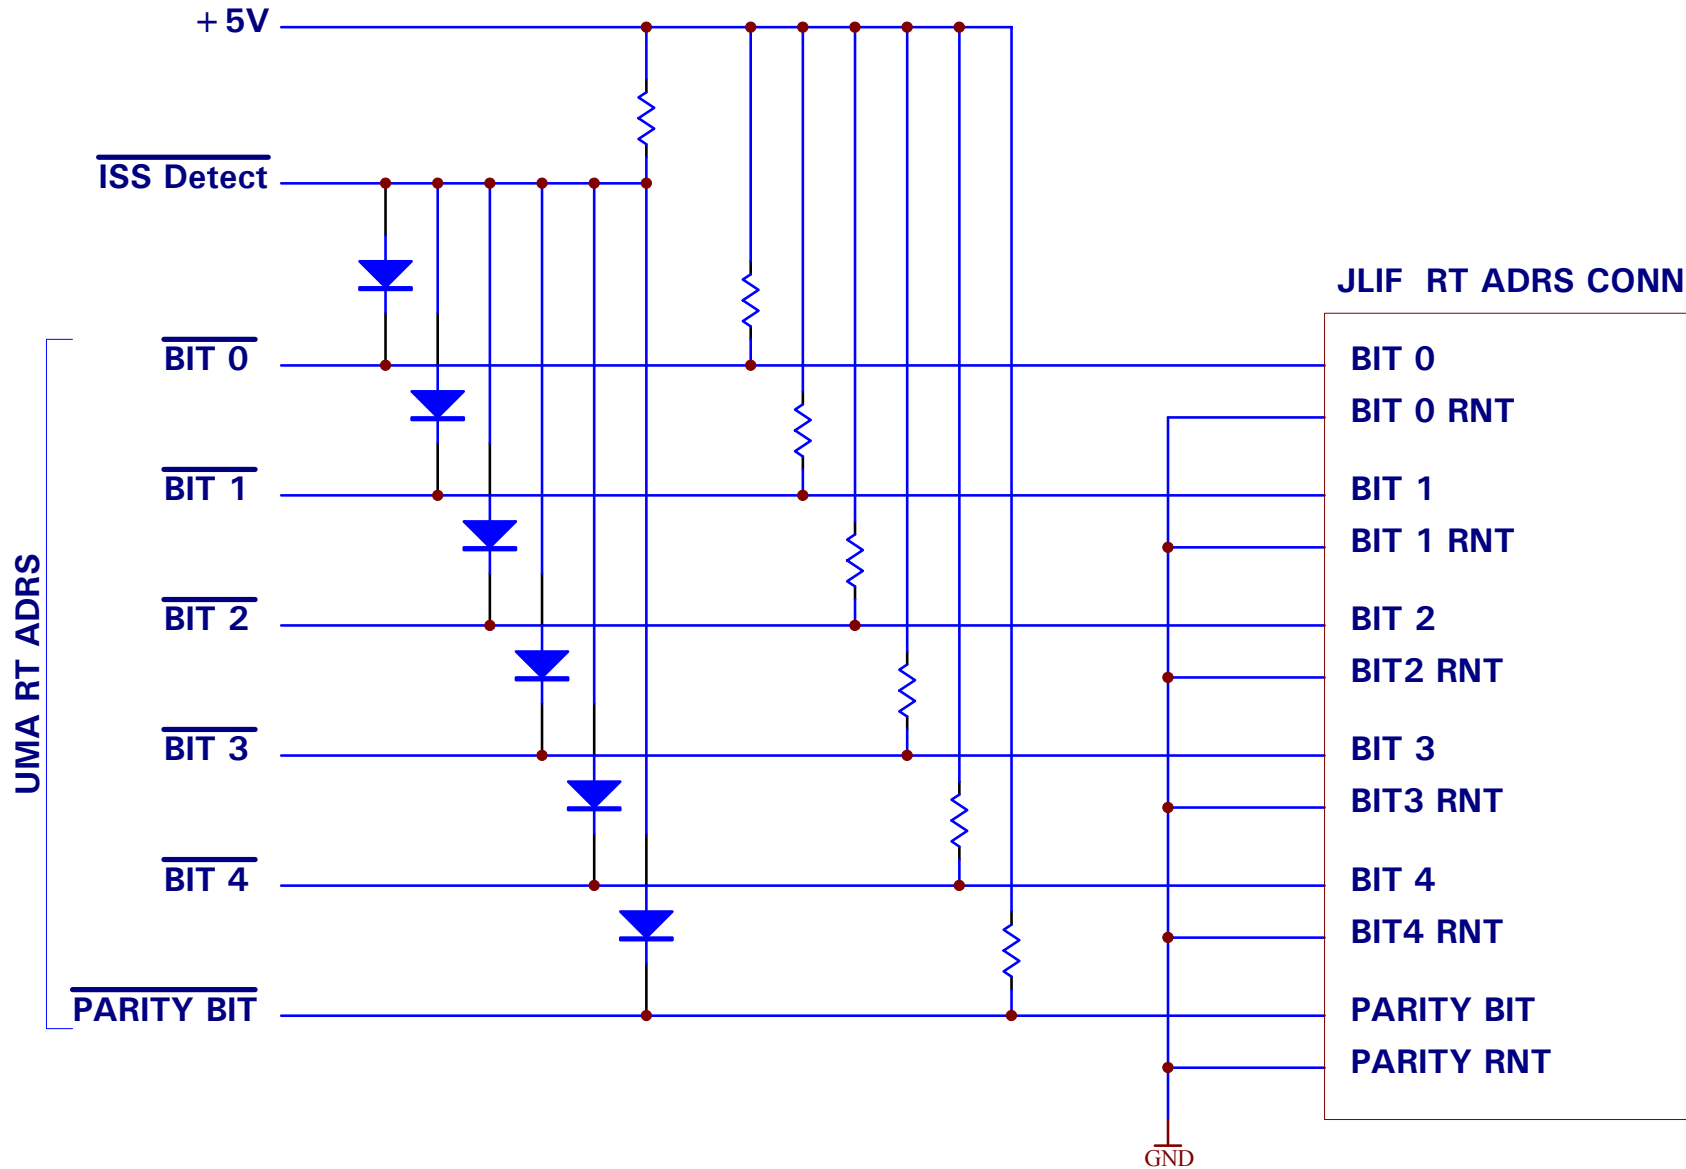

## JLIF: Power Control

<b>ISS Detect</b>	<b>0</b>	<b>0</b>	<b>1</b>	<b>1</b>
<b>YISS</b>	<b>X</b>	<b>X</b>	<b>1</b>	<b>0</b>
<b>YSTS</b>	<b>0</b>	<b>1</b>	<b>X</b>	<b>X</b>
<b>ZISS</b>	<b>X</b>	<b>X</b>	<b>0</b>	<b>1</b>
<b>ZSTS</b>	<b>1</b>	<b>0</b>	<b>X</b>	<b>X</b>
<b>+ 5V TO</b>	<b>Z</b>	<b>Y</b>	<b>Y</b>	<b>Z</b>